


Atlas Metal INDUSTRIES, INC.

Subsidiary of Mercury Aircraft, Inc.

1135 N.W. 159th DR., MIAMI, FL 33169

PHONE (305) 625-2451, (800) 762-7565, FAX (305) 623-0475, E-mail: sales@atlasfoodserv.com

PARTS LIST REFRIGERATED BASE RB-4, RB-5 SERIES

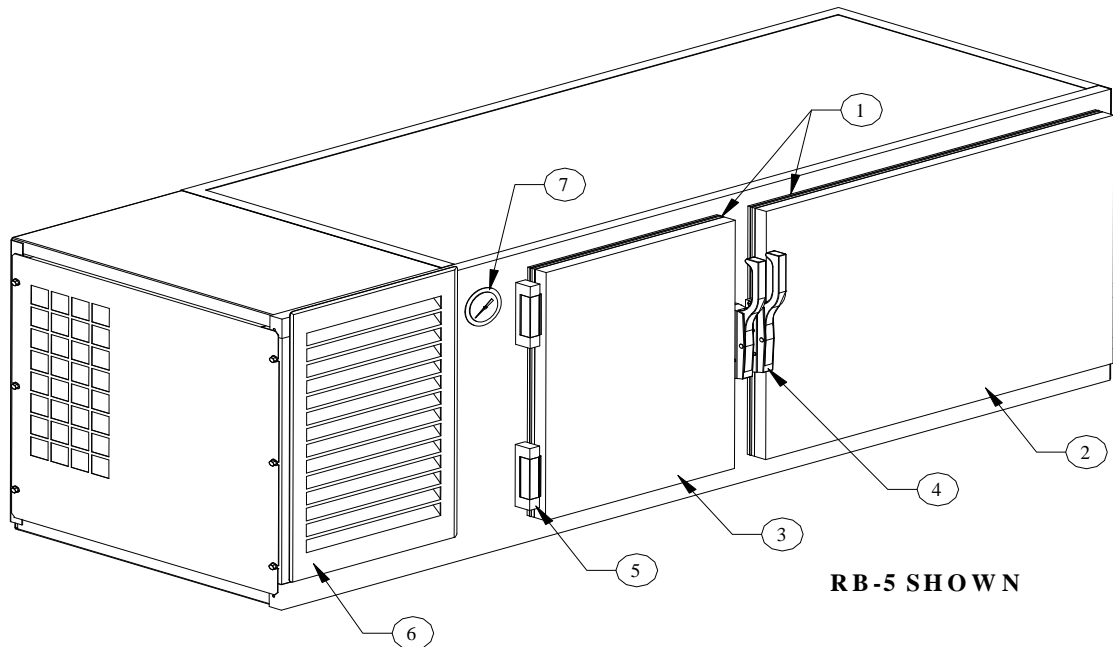

| ITEM | PART | DESCRIPTION |
|------|--------------------------|------------------------------------|
| | 97-105 | RB-4 & RB-5 Large Door Gasket |
| | 97-107 | RB-5 Small Door Gasket |
| 2 | S90253-4 | Door Assembly RB-4 & RB-5 |
| 3 | S83951-0 | Door Assembly RB-5 |
| 4 | 6055-1 | Slam Action Latch |
| | 6052-1 | Slam Action Latch W/Lock |
| 5 | 6053-8 | Hinge & Cover |
| 6 | S84051-0 | RB-4 Grill |
| | S84050-0 | RB-5 Grill |
| 7 | 113-5 | Thermometer |
| 8 | 2060-1 | Condensate Water Evap. (Not Shown) |
| 9 | 1002-0 | Power Cord (Not Shown) |
| 10 | 2006-4 | 1/4 H.P. Compressor (Not Shown) |
| 11 | 2119-0 | Evaporator Coil RB-5 (Not Shown) |
| | | Evaporator Coil RB-4 (Not Shown) |
| 12 | 22-1406 | Thermostat (Not Shown) |
| 13 | 2013-0 | Fan Motor (Not Shown) |
| 14 | 2014-5 | Fan Blade (Not Shown) |
| 15 | S81441-0 | Fan Guard (Not Shown) |
| 16 | S81419-0 | Fan Bracket (Not Shown) |
| 17 | 1149-0 | Wire Harness (Not Shown) |
| 18 | S83952-0 | Tray Rack (Not Shown) |
| 19 | 2026-0 | 0.042 Cap Tube (Not Shown) |
| 20 | 2025-0 | Drier (Not Shown) |

SLIDE- IN REFRIGERATED BASE

RB SERIES

| MODEL | STORAGE CAPACITY 12 " X 20" PANS | CUT-OUT REQUIRED |
|-------|-------------------------------------|---------------------|
| RB-4 | 10 Pans- 1 Door 8 cu. ft. | 23 1/2" X 55 1/2" |
| RB-5 | 15 Pans- 2 Doors 10 cu. ft. | 23 1/2" X 69 1/4" |

OPERATION

The unit is ready to operate as soon as it is plugged in and turned on. The thermostat has an off position and numbers from #1 through #7 (number 7 is the coldest). The unit has been pre-tested and set for proper operation with the thermostat set for 35° to 40°. Do not block air discharge openings inside the base of the unit. A timer is installed in the system to shut the compressor off every 4 hours (approximately 15 minutes) to eliminate ice build up on the evaporator coil.

The unit is supplied with a power cord and NEMA plug. Refer to the data plate located in the compressor compartment for the amperage and voltage information. Use a licensed electrician when installing power source.

Note: Proper ventilation must be provided in counter.

MAINTENANCE

NEVER CLEAN THE UNIT WITH A CHLORIDE BASED PRODUCT. CHLORIDES OR IMPROPER CLEANING COULD SCAR, MARK AND/OR CORRODE METAL. **DO NOT** USE STEEL WOOL OR ABRASIVE PRODUCTS. TO CLEAN USE SOAPY WARM WATER, RINSE THOROUGHLY TO REMOVE ALL RESIDUES. CLEAN CONDENSER COIL REGULARLY. **FAILURE TO MEET THESE CONDITIONS WILL VOID WARRANTY.**