

SECTION 3. PARTS INFORMATION

3-1. INTRODUCTION

This section identifies and lists the replaceable parts of the Henny Penny blast chiller/freezer.

3-2. GENUINE PARTS

Use only genuine Henny Penny parts in your cabinet. Using a part of lesser quality or substitute design may result in cabinet damage or personal injury.

3-3. HOW TO ORDER PARTS

Once the part you want to order has been found in the Parts List, write down the following information:

1. From the Parts List
(Sample)
Item Number 13
Part Number 9501.6267
Description Condenser
2. From the data plate
(Sample)
Product Number BCF.100
Serial Number 0001
Voltage 208V

3-4. PRICES

Your distributor has a price parts list and will be glad to inform you of the cost of your parts order.

3-5. DELIVERY

Commonly replaced items are stocked by your distributor and will be sent out when your order is received. Other parts will be ordered by your distributor from Henny Penny Corporation. Normally, these will be sent to your distributor within three working days.

3-6. WARRANTY

All replacement parts (except lamps and fuses) are covered under warranty for 90 days against manufacturing defects and workmanship. If damage occurs during shipping, notify the carrier at once so that a claim may be properly filed. Refer to warranty on the front of this section for other rights and limitations.

3-7. RECOMMENDED SPARE PARTS FOR DISTRIBUTORS

Recommended replacement parts, stocked by your distributor, are indicated with √ in the parts lists. Please use care when ordering recommended parts, because all voltages and variations are marked. Distributors should order parts based upon common voltages and equipment sold in their territory.

Item No.	Part No.	Description	Quantity				
			BCC	BCR	BCC	BCR	BFR/
			140	140	175	175	350
√ 1	9504.0205	Control PC Board	1	1	1	1	1
√ 2	9503.3692	Display PC Board	1	1	1	1	1
√ 3	9503.3700	Auxiliary Display Board	1	1	1	1	1
4	9503.3759	Connecting Cable	1	1	1	1	1
√ 5	9503.7719	Communication Board	1	1	1	1	1
6	9503.8436	Printer	1	1	1	1	1
7	9503.8428	Printer Connecting Cable	1	1	1	1	1
√ 8	9503.3726	Buzzer - 240V - UL	1	1	1	1	1
9	9500.7936	Drier	1	-	1	-	-
√ 10	9503.6232	De-icing Heater - UL - 500W	3	3	3	3	6
√ 11	9500.7209	Air Probe	1	1	1	1	1
√ 12	9500.7209	Evaporator Probe	1	1	1	1	1
√ 13	9502.6563	Run Capacitor - 4 mF	3	3	3	3	-
14	9560.0334	Evaporator Fan	3	3	3	3	4
15	9505.3963	Evaporator Fan Grid - UL	3	3	3	3	4
√ 16	9502.0400	Frigiprobe	1	1	1	1	1
√ 17	9503.3643	Fuse Holder	1	1	1	1	1
√ 18	9503.3650	Fuse - 10A	1	1	1	1	1
√ 19	9503.0185	Varistor V320LA20A	1	1	1	1	1
20	9503.3601	Control Panel Decal	1	1	1	1	-
20	9503.6224	Control Panel Decal - BCR-350	-	-	-	-	1
21	9501.5186	Contactora - UL/CSA - 3P 23A/AC3 (BCC-175 before Oct. 2004, order 9502.0848 also)	-	-	1	-	1
21	9503.0912	Contactora - UL/CSA - 3P 12A/AC3	1	-	-	-	-
22	9503.3304	Condenser Fan Motor-25W, 230V, 60 Hz	-	-	1	-	-
22	9502.1846	Condenser Fan Motor-120W, 230V, 60 Hz	1	-	-	-	-
23	9501.8644	Water Condenser - 115V	-	-	1	-	-
24	9503.7784	Condenser - UL	1	-	-	-	-
25	9503.3312	Fan Blade for Condenser - BCC-175	-	-	1	-	-
26	9503.6190	Compressor - BCC-175	-	-	1	-	-
26	9502.1762	Compressor - BCC-140	1	-	-	-	-
27	9502.8668	Evaporator - BCC/BCR-175	-	-	1	1	-
27	9501.6283	Evaporator - BCC/BCR-140	1	1	-	-	-
27	9502.8676	Evaporator - BCR-350	-	-	-	-	1
√ 28	9503.6174	Thermal Overload Relay - BCC-175	-	-	1	-	-
√ 28	9503.6158	Thermal Overload Relay - BCC-140	1	-	-	-	-
√ 29	9503.6257	F. Frame Heater-BCC-175; BCR-175/350	-	-	2	2	2
√ 29	9503.7735	Front Frame Heater-75W-BCC/BCR-140	1	1	-	-	-
√ 30	9502.5995	Expansion Valve-BCC-175; BCR-175/350	-	-	1	1	2
√ 30	9502.6951	Expansion Valve - BCC/BCR-140	1	1	-	-	-
√ 30	9502.5383	Expansion Valve - BFR-350	-	-	-	-	2
31	9500.8850	Nozzle-Exp.Valve-BCC-175; BCR-175/350	-	-	1	1	2
31	9500.8843	Nozzle-Expansion Valve - BCC/BCR-140	1	1	-	-	-

√ recommended parts

Item No.	Part No.	Description	Quantity				BFR/BCR
			BCC 140	BCR 140	BCC 175	BCR 175	
31	9500.8967	Nozzle-Expansion Valve BFR-350	-	-	-	-	2
32	9500.7993	Water Pressure Valve - BCC-175	-	-	1	-	-
√ 33	9503.6182	High Pressure Switch - BCC-140	1	-	-	-	-
34	9502.5045	Liquid Receiver - BCC-140	1	-	-	-	-
34	9550.4585	Door - BCC/BCR-175/350	-	-	1	1	1
34	9550.6630	Door - BCC/BCR-140	1	1	-	-	-
35	9543.0831	Front Panel for Printer - BCC/BCR-175	-	-	1	1	-
35	9542.5989	Front Panel for Printer - BCC/BCR-140	1	1	-	-	-
36	9541.6053	Vert. Evap. Deflector-BCC/BCR-175	-	-	1	1	-
36	9541.7671	Vert. Evap. Deflector-BCR-350	-	-	-	-	1
37	9505.3674	Door Seal - BCC/BCR-175/350	-	-	1	1	1
37	9505.4466	Door Seal - BCC/BCR-140	1	1	-	-	-
38	9501.9998	Floor Door Seal - BCC/BCR-175	-	-	1	1	-
39	9541.8919	Left and Right Side Panels - BCC/BCR-175	-	-	2	2	-
40	9542.5963	LH Panel-BCC-140; LH & RH-BCR-140	1	2	-	-	-
41	9542.7225	Right Side Panel - BCC-140	1	-	-	-	-
42	9543.0419	Top Cover with Condensing Unit-BCC-140	1	-	-	-	-
42	9543.0518	Top Cover w/o Condensing Unit-BCR-140	-	1	-	-	-
42	9543.0427	Top Cover with Condensing Unit-BCC-175	-	-	1	-	-
42	9543.0542	Top Cover w/o Cond. Unit-BCR-175/350	-	-	-	1	1
43	9502.8601	Door Latch - BCC/BCR-175; BCR-350	-	-	1	1	1
43	9501.4551	Door Latch with Strike - BCC/BCR-140	1	1	-	-	-
44	9502.8619	Door Strike - BCC/BCR-175; BCR-350	-	-	1	1	1
45	9502.8585	Door Hinge - BCC/BCR-175; BCR-350	-	-	2	2	1
45	9501.4601	Door Hinge - BCC/BCR-140	1	1	-	-	-
46	9502.8593	Hinge Shim - BCC/BCR-175; BCR-350	-	-	2	2	1
√ 47	9503.6240	High Limit Safety Thermostat	1	1	1	1	2
48	9503.4583	Valve Body - BCR-140/175/350	-	1	-	1	1
49	9503.4591	Coil - BCR-140/175/350	-	1	-	1	1
√ 50	9504.0128	Power Switch	1	1	1	1	1
51	03201	Printer Accessory Bracket	1	1	1	1	1
52	9504.0139	32MM Plastic Drain	1	1	1	1	1
53	9500.2804	32MM PVC Elbow	1	1	1	1	1
54	9503.9236	32MM PVC - T	1	1	1	1	1

√ recommended parts

