

# Salvajor Scrap Collector and Pot/Pan Collector


PARTS BREAKDOWN for Models S914 and P914

For Serial Numbers starting at 26000 for Model P914 & 27000 for Model S914

## System Components

Model S914


Model P914

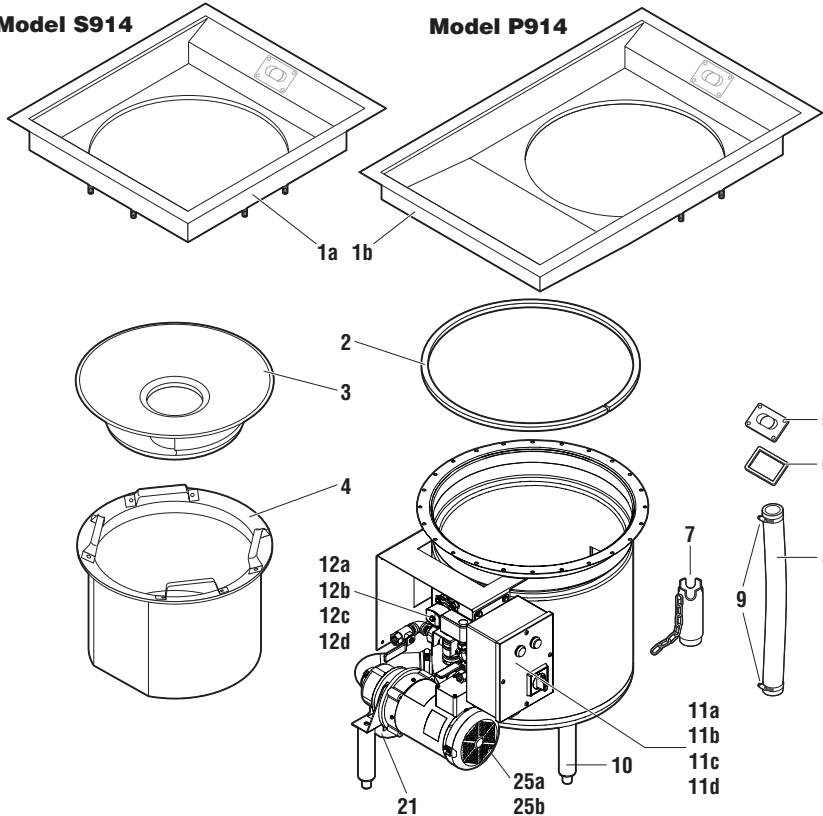


## ITEM PART NO. DESCRIPTION

1a	980167	S914 TOP ASSEMBLY
1b	980168	P914 TOP ASSEMBLY
2	996058	TOP GASKET
3	992011	SALVAGE BASIN
4	992013	SCRAP BASKET
5	980146	GUSHER PLATE
6	996057	GUSHER PLATE GASKET
7	988006	OVERFLOW PIPE ASSEMBLY
8	986055	RECIRCULATION HOSE
9	M32	HOSE CLAMP (sold separately)
10	914LESS	STAINLESS STEEL LEG
11a	MSSLD4	CONTROL PANEL 115V 1PH
11b	MSSLD5	CONTROL PANEL 208-230V 1PH
11c	MSSLD7	CONTROL PANEL 208-230V 3PH
11d	MSSLD9	CONTROL PANEL 460V 3PH
12a	9801582	WATER HARNESS 24V ASSY (includes 13-20)
12b	9801584	WATER HARNESS 115V ASSY (includes 13-20)
12c	9801585	WATER HARNESS 208/230V ASSY (includes 13-20)
12d	9801589	WATER HARNESS 460V ASSY
13	998124	WATER HARNESS BLENDER (only)
14	980159	NOZZLE ASSEMBLY SC/PC/TC (includes 15-19)
15	998113	3/8" NYLON ELBOW
16	2906	FIXED NOZZLE
17	998022	3/8" BRAIDED TUBING
18	997001	HOSE CLAMP
19	998046	ADAPTOR 3/8" X 1/2" 90 DEG HOSE
20a	AS8242	SOLENOID VALVE ASSY 24V
20b	AS81152	SOLENOID VALVE ASSY 115V
20c	AS82082	SOLENOID VALVE ASSY 208-230V
20d	AS84602	SOLENOID VALVE ASSY 460V
21	980164	PUMP RECIRCULATION PIPE ASSY (includes 22-24)
22	988027	VALVE ASSEMBLY
23	S24	HOSE CLAMP
24	S914PDE	RUBBER ELBOW 3/4" X 1"
25a	980076	PUMP AND MOTOR ASSY 1PH (includes 27-35)
25b	980077	PUMP AND MOTOR ASSY 3PH (includes 27-35)
26	996034	ELBOW 125 DEGREE RUBBER (sold separately)
27	980074	PUMP ASSEMBLY (includes 28-34)
28	988010	PUMP HOUSING
29	997089	CAP SCREW (not used on 1-phase)
30	996027	IMPELLER
31	996028	O-RING
32	ECK511	SEAL KIT
33	988009	PUMP BASE
34	996030	V-RING
35a	991060	PUMP MOTOR 1PH
35b	991061	PUMP MOTOR 3PH
36	980157	LEG BRACKET (sold separately)
37	997061	SCREW 3/8" (sold separately)
38	38L	LOCKWASHER (sold separately)


## Item #12a-12d

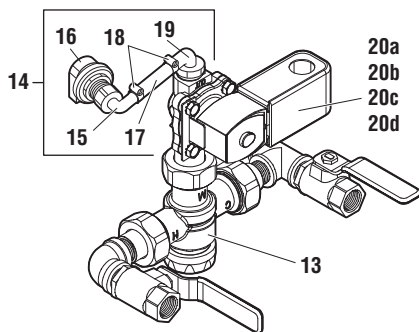

## Item #21

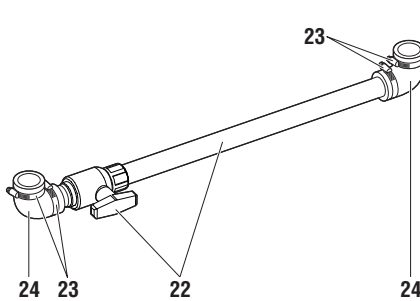

## Item #25a Item #25b (shown)

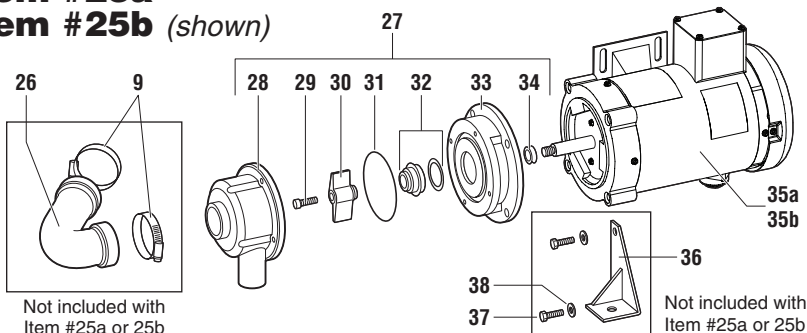

## The Salvajor Company


4530 East 75th Terrace  
Kansas City, MO 64132-2081 USA

1-888-SALVAJOR FAX 1-800-832-9373

# Salvajor Model MSS-LD


## Manual Start/Stop with Line Disconnect

### PRE-WIRED CONTROL PANEL PARTS BREAKDOWN

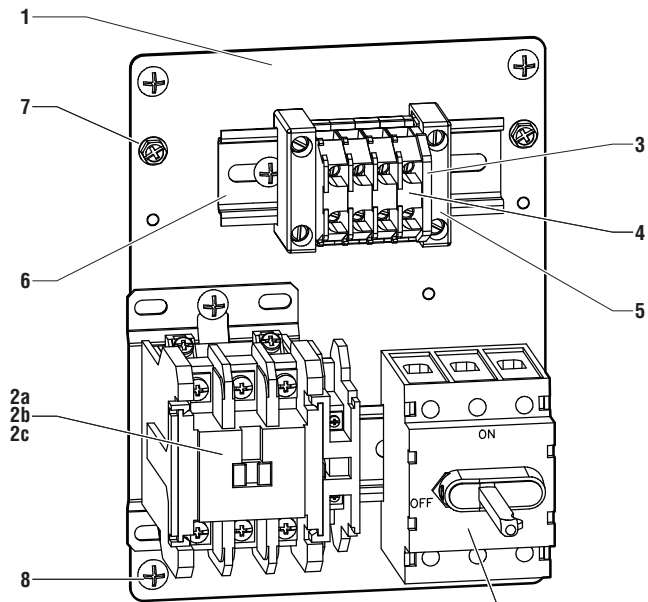

MSS-LD Item Numbers		
VOLTAGE	PHASE	ITEM NO.
115	1	<b>MSSLD4</b>
208 or 230	1	<b>MSSLD5</b>
208 or 230	3	<b>MSSLD7</b>
460	3	<b>MSSLD9</b>

ITEM	PART NO.	DESCRIPTION
1	79IP	Inner Panel Plate MSS
2a	994006	Contactora 115V
2b	994007	Contactora 208-230V
2c	994008	Contactora 460V
3	994294	End Clamp
4	994292	Terminal Block
5	994293	End Barrier
6	994005	Din Rail Mounting Track
7	SCR1032	Ground Screw 10-32
8	997093	Screw 10-32 X 3/8"
9	79GA	Lid Gasket Assembly
10	ABD100B	Button Start
11	ABD200A	Button Stop
12	79BA	7" X 9" Box Assembly
13	997032	Screw 10-32 X 5/8"
14	980138	Line Disconnect Assembly
14a	984016	Line Disconnect Handle

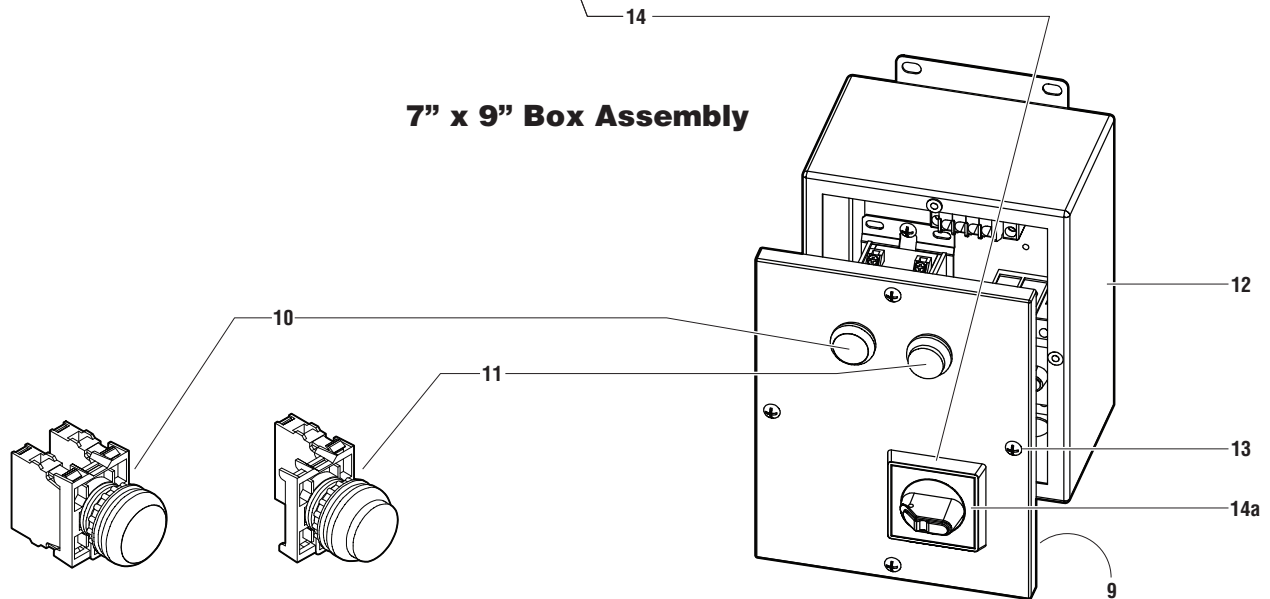

**The Salvajor Company**

4530 East 75th Terrace  
 Kansas City, MO 64132-2081 USA

1-888-SALVAJOR FAX 1-800-832-9373