



**Star
Manufacturing
International Inc.**

10 Sunnen Dr.
St. Louis, MO 63143

Phone: (314) 781-2777
FAX: (314) 781-3636

**Installation
and
Operating
Instructions**

2M-Y5707 Rev. C 8/15/95

SOUP KETTLE COOKERS and HOLDERS MODELS 7C, 7H, 11C, 11H



MODEL 11C





CAUTION

This equipment is designed and sold for commercial use only by personnel trained and experienced in its operation and is not sold for consumer use in and around the home nor for use directly by the general public in food service locations.

INSTALLATION

These food warmers are equipped for the voltage and wattage indicated on the nameplate mounted to the back panel and are designed for use on alternating current (AC) only. Serious damage may result if appliance is used with incorrect voltage.



CAUTION

DO NOT CONNECT TO DIRECT CURRENT (DC).

GENERAL OPERATING INSTRUCTIONS

1. Before using the soup kettle, clean the water and soup bowls and its cover if furnished with the kettle.
2. Do not operate the kettle dry. Place water in the water bowl (14 ounces of water for 11 qt. Model, 26 ounces for the 7 qt. Model).
3. The temperature control on these kettles is a combination On/Off switch with an infinite control. The "OFF" position will turn off the electric current to the heating element.
4. If PRE-HEATING IS DESIRED SET THE CONTROL AT "HI" for approximately 20-30 minutes. Prolonged "HI" setting may result in overcooking or scorching of certain food.

5. Set the dial to the number required to maintain the temperature desired. Because the consistency of different food varies, and because liquids and solids absorb heat at different rates, it is impractical to specify the exact dial setting. Therefore, we have indicated the setting with a series of numbers. A little experience will give you the proper setting for various foods you are serving.
6. The soup cookers are equipped with a warning light to prevent overheating or scorching of certain soups. When the light is on, all electric current to the heating elements will be off. Turn the heat setting down to a lower setting and wait 5-10 minutes for the light to go out. It would also be advisable to check the water level in the water bowl.
7. Turn the control to the "OFF" position when the unit is not in use.



CAUTION

DO NOT OVER-HEAT THE UNIT.

CLEANING INSTRUCTIONS

Change water in water bowl daily and remove any food collection that may have entered the water bath. Clean soup bowl, cover and the kettle at a sink with soap and water.

The exterior surfaces of the warmer can be kept clean and attractive by wiping or washing regularly with a soft cloth and mild soap and water. Any discoloration on the bowls and cover can be removed with a non-abrasive cleaner. **Do not use an abrasive cleaner as the attractive coatings will be affected adversely.**

MAINTENANCE AND REPAIRS

Contact the factory, a service representative or a local service company for service or required maintenance.

RETAIN THIS MANUAL FOR FUTURE REFERENCE
PART NO. 2M-Y5707 REV. C 8/15/95