

ARM-608

Parts List

Part#	Description
ARM-608-1	BODY
ARM-608-2	TOP COVER
ARM-608-3	BAGGING TROUGH
ARM-608-4	SCREW
ARM-608-5	ADJUSTABLE BAGGING PLATE
ARM-608-6	NUT
ARM-608-7	BREAD PUSHING TROUGH
ARM-608-8	BREAD INPUT PLATE
ARM-608-9	BREAD PLATE
ARM-608-10	BREAD OUTLET PLATE
ARM-608-11	LEFT HOLDING PLATE
ARM-608-12	RIGHT HOLDING PLATE
ARM-608-13	SLIDE BAR BRACKET
ARM-608-14	SLIDE BAR
ARM-608-15	BUSHING
ARM-608-16	BUSHING
ARM-608-19	BREAD PUSHING HANDLE
ARM-608-20	CONNECTING ROD
ARM-608-26	SCRAP PAN HANDLE
ARM-608-27	SCRAP PAN
ARM-608-31	MOTOR
ARM-608-32	MOTOR PULLEY
ARM-608-35	SUPPORT BRACKET
ARM-608-36	LOCATING BRACKET
ARM-608-37	DRIVE PULLEY
ARM-608-38	SQUARE BRACKET
ARM-608-39	CRANK
ARM-608-40	BEARING
ARM-608-41	"C" CLAMP
ARM-608-42	BEARING
ARM-608-43	"C" CLAMP
ARM-608-44	CONNECTING PIVOT LINK SET
ARM-608-47	SQUARE BLOCK
ARM-608-48	WASHER
ARM-608-49	SHAFT
ARM-608-50	WASHER
ARM-608-51	SCREW
ARM-608-52	WASHER
ARM-608-55	FRONT FRAME
ARM-608-56	REAR FRAME
ARM-608-57	RUBBER PLATE

ARM-608-58	SAFETY TROUGH
ARM-608-59	LUBRICATION BRACE
ARM-608-60	PIVOT BAR
ARM-608-61	RIGHT BAR LINK
ARM-608-62	SCREW
ARM-608-63	LEFT BAR LINK
ARM-608-64	SPRING
ARM-608-65	SPRING
ARM-608-66	SCREW
ARM-608-70	TOP TROUGH BRACE
ARM-608-71	BLADE LUG TAB
ARM-608-72	BLADE LUG TAB
ARM-608-73	BLADE SPRING
ARM-608-74	BLADE SCREW
ARM-608-75	BLADE
ARM-608-76	OIL TANK
ARM-608-77	PUMP
ARM-608-78	PIVOT BAR LINK
ARM-608-79	BEARING HOLDER
ARM-608-80	BEARING
ARM-608-81	FLANGE
ARM-608-82	SCREW
ARM-608-83	NUT
ARM-608-84	WASHER
ARM-608-85	WASHER
ARM-608-86	WASHER
ARM-608-87	SCREW
ARM-608-88	SCREW
ARM-608-89	PLATE
ARM-608-91	SCREW
ARM-608-92	PLATE
ARM-608-93	SCREW
ARM-608-94	SPRING WASHER
ARM-608-95	BRACKET
ARM-608-98	SPRING
ARM-608-99	HOLDER