

TB-300E

Parts List

Part #	Description
TB-300E-1	FUNNEL
TB-300E-2	SCREW RING
TB-300E-3.1	PLATE 1/8"
TB-300E-3.2	PLATE 3/16"
TB-300E-3.3	PLATE 1/4"
TB-300E-3.4	PLATE 3/8"
TB-300E-3.5	PLATE 1/2"
TB-300E-4	KNIFE
TB-300E-5	SQUARE SCREW
TB-300E-6	WORM
TB-300E-7	PLASTIC BUSHING
TB-300E-8	BODY
TB-300E-9	GEAR BOX SCREW
TB-300E-10	GEAR BOX COVER
TB-300E-11	OIL SEAL
TB-300E-12	BEARING
TB-300E-13	GEAR SQUARE HOLE
TB-300E-14	BEARING
TB-300E-15	LOCK SCREW
TB-300E-16	DOUBLE GEAR
TB-300E-16-1	DOUBLE GEAR STUD
TB-300E-17	RUBBER PAD
TB-300E-18	SCREW
TB-300E-19	BASE
TB-300E-20	GEAR BOX
TB-300E-21	MEAT PAN SUPPORT
TB-300E-22	MOTOR BEARING
TB-300E-23	MOTOR
TB-300E-24	SWITCH BOX - BACK
TB-300E-24-1	SWITCH BOX - FRONT
TB-300E-25	CABLE WIRE
TB-300E-26	MEAT PAN
TB-300E-27	MEAT PUSHER
TB-300E-28	OIL SEAL
TB-300E-29	WASHER
TB-300E-30	CAPACITOR CASE
TB-300E-31	CAPACITOR
TB-300E-32	PINION
TB-300E-33	OIL SEAL
TB-300E-34	PIN
TB-300E-35	START WINDING
TB-300E-36	FAN
TB-300E-37	FAN COVER

TB-300E-38	SCREW
TB-300E-39-1	SWITCH
TB-300E-39-2	RED ROCKER SWITCH
TB-300E-40	CABLE GLAND
TB-300E-41	BASE COVER