

## TB-400E Parts List

Part#	Description
THNTB-400E-1	FUNNEL
THNTB-400E-2	SCREW RING
THNTB-400E-3.1	PLATE 1/8"
THNTB-400E-3.2	PLATE 3/16"
THNTB-400E-3.3	PLATE 1/4"
THNTB-400E-3.4	PLATE 3/8"
THNTB-400E-3.5	PLATE 1/2"
THNTB-400E-4	KNIFE
THNTB-400E-5	SQUARE SCREW
THNTB-400E-6	WORM
THNTB-400E-7	PLASTIC BUSHING
THNTB-400E-8	BODY
THNTB-400E-9	GEAR BOX SCREW
THNTB-400E-10	GEAR BOX COVER
THNTB-400E-11	OIL SEAL
THNTB-400E-12	BEARING
THNTB-400E-13	GEAR SQUARE HOLE
THNTB-400E-14	BEARING
THNTB-400E-15	LOCK SCREW
THNTB-400E-16	DOUBLE GEAR
THNTB-400E-16-1	DOUBLE GEAR
THNTB-400E-17	RUBBER PAD
THNTB-400E-18	SCREW
THNTB-400E-19	BASE
THNTB-400E-20	GEAR BOX
THNTB-400E-21	MEAT PAN SUPPORT
THNTB-400E-22	MOTOR BEARING
THNTB-400E-23	MOTOR
THNTB-400E-24	SWITCH BOX
THNTB-400E-25	CABLE WIRE
THNTB-400E-26	MEAT PAN
THNTB-400E-27	MEAT PUSHER
THNTB-400E-28	OIL SEAL
THNTB-400E-29	WASHER
THNTB-400E-30	CAPACITOR CASE
THNTB-400E-31	CAPACITOR
THNTB-400E-32	PINION
THNTB-400E-33	OIL SEAL
THNTB-400E-34	PIN
THNTB-400E-35	START WINDING
THNTB-400E-36	FAN

THNTB-400E-37	FAN COVER
THNTB-400E-38	SCREW
THNTB-400E-39	SWITCH
THNTB-400E-39-1	GREEN/RED SWITCH
THNTB-400E-40-1	CABLE GLAND
THNTB-400E-40-1	BASE COVER