

TBPR-690

Parts List

Part#	Description
TBPR-690-1	DOUGH INPUT CHUTE
TBPR-690-2	SCREW
TBPR-690-3	SCREW
TBPR-690-4	TOP COVER
TBPR-690-5	SCREW
TBPR-690-6	OUTPUT PANEL
TBPR-690-7	FRONT PANEL
TBPR-690-8	CHAIN WHEEL
TBPR-690-9	KEY
TBPR-690-10	SCREW
TBPR-690-11	WASHER
TBPR-690-12	MOTOR
TBPR-690-13	FRAME
TBPR-690-14	WASHER
TBPR-690-15	LEG
TBPR-690-16	PAD
TBPR-690-17	STOP BUTTON
TBPR-690-18	START BUTTON
TBPR-690-19	WASHER
TBPR-690-20	SCREW
TBPR-690-21	CHAIN
TBPR-690-22	ADJUSTING CAM BLOCK
TBPR-690-23	ROUND PANEL
TBPR-690-24	BEARING
TBPR-690-25	ROLLER-1
TBPR-690-26	ROLLER-2
TBPR-690-27	CHAN WHEEL
TBPR-690-28	SPRING
TBPR-690-29	LOCK PIN
TBPR-690-30	BEARING
TBPR-690-31	ROUND PANEL
TBPR-690-32	ROLLER SHAFT
TBPR-690-33	ROUND LOCKING PANEL
TBPR-690-34	SCREW
TBPR-690-35	FIX SCREW
TBPR-690-36	FIXING PANEL
TBPR-690-37	LOCKING PANEL
TBPR-690-38	SCREW BAR
TBPR-690-39	METAL BALL
TBPR-690-40	ROLLER SHAFT
TBPR-690-41	UPPER SCRAPER HOLDER

TBPR-690-42	UPPER SCRAPER
TBPR-690-43	SCREW
TBPR-690-44	UPPER SCRAPER SPRING
TBPR-690-45	SCREW
TBPR-690-46	MIDDLE SCRAPER HOLDER
TBPR-690-47	SCREW
TBPR-690-48	MIDDLE SCRAPER
TBPR-690-49	TENSION HOLDER
TBPR-690-50	SCREW
TBPR-690-51	LOWER SCRAPER
TBPR-690-52	LOWER SCRAPER HOLDER