

TTD-308

Parts List

Part#	Description
TTD-308-1	LONG SCREW
TTD-308-2	MOTOR TOP COVER
TTD-308-3	MOTOR HOUSING
TTD-308-4	MOTOR
TTD-308-5	SCREW
TTD-308-6	WORM GEAR
TTD-308-7	"C" CLAMP
TTD-308-8	GEAR BOX
TTD-308-9	POWER LIGHT
TTD-308-10	CONTACTOR
TTD-308-11	POWER CORD CLAMP
TTD-308-12	POWER CORD
TTD-308-13	SENSOR
TTD-308-14	SWITCH
TTD-308-15	BOTTOM PLATE
TTD-308-16	SCREW
TTD-308-17	STAND
TTD-308-18	SAFETY GARD
TTD-308-19	SENSOR
TTD-308-20	GUIDE PLATE
TTD-308-21	BEARING
TTD-308-22	"C" CLAMP
TTD-308-23	GEAR
TTD-308-24	DRIVE GEAR
TTD-308-25	"C" CLAMP
TTD-308-26	BEARING
TTD-308-27	DRIVE SHAFT (A)
TTD-308-28	DRIVE SHAFT (B)
TTD-308-29	BUSHING
TTD-308-30	SUPPORT BLOCK
TTD-308-31	LOCK SCREW
TTD-308-32	BUSHING
TTD-308-33	LOCK RING
TTD-308-34	TENDERIZING DRIVE SHAFT
TTD-308-35	BLOCK FIX BAR
TTD-308-36	KEY
TTD-308-37	BLOCK SUPPORT BAR
TTD-308-38	TENDERIZING BLADE
TTD-308-39	SPACER
TTD-308-40	LOCK RING